


the intellitouch[™] Capo TUNER

**AUTOMATIC
& CHROMATIC
DIGITAL TUNER
& CAPO IN ONE**

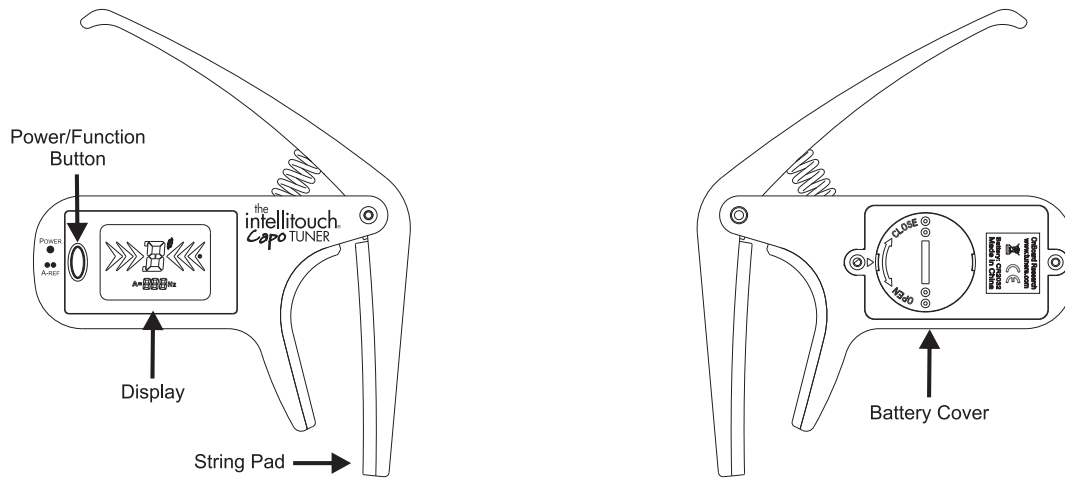


USING THE INTELLITOUCH[®] CAPO TUNER

To turn the tuner on or off, press and hold the Power/Function Button for 2 seconds. The tuner will automatically turn off after 2 minutes of inactivity.

Clamp the tuner onto your instrument at the desired fret. For best results, place the String Pad firmly against the desired fret.


Pluck a string. The Display will show the note to which the string is tuned. The arrows on either side of the note letter indicate whether the note is flat, sharp or in tune. When all 6 arrows are displayed (3 on each side of the note letter) and the backlight turns green, the note is in tune. When more arrows appear on the left side of the note letter, the note is flat. When more arrows appear on the right side of the note letter, the note is sharp.

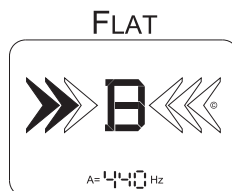

FLAT - More arrows on left and backlight glows red.



IN TUNE - All six arrows are displayed and backlight glows green.

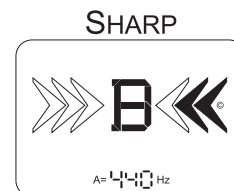

SHARP - More arrows on right and backlight glows red.

CHANGING THE A-REFERENCE:

With the tuner on, double-press (2 quick presses) to enter the A-Reference Adjustment Mode. The frequency digits will blink. Single-press to scroll through the frequency references until the desired reference is reached, then simply stop and wait. After 3 seconds, the tuner will save the new reference and return to the tuning mode. A-Reference Range = 430-450Hz.

REPLACING THE BATTERY:

The Intellitouch[®] Capo Tuner requires one CR2032 coin cell lithium battery. Turn the Battery Cover counter-clockwise to open the battery compartment. The new battery should be placed positive side up.